


# EC-Log Installation Guide

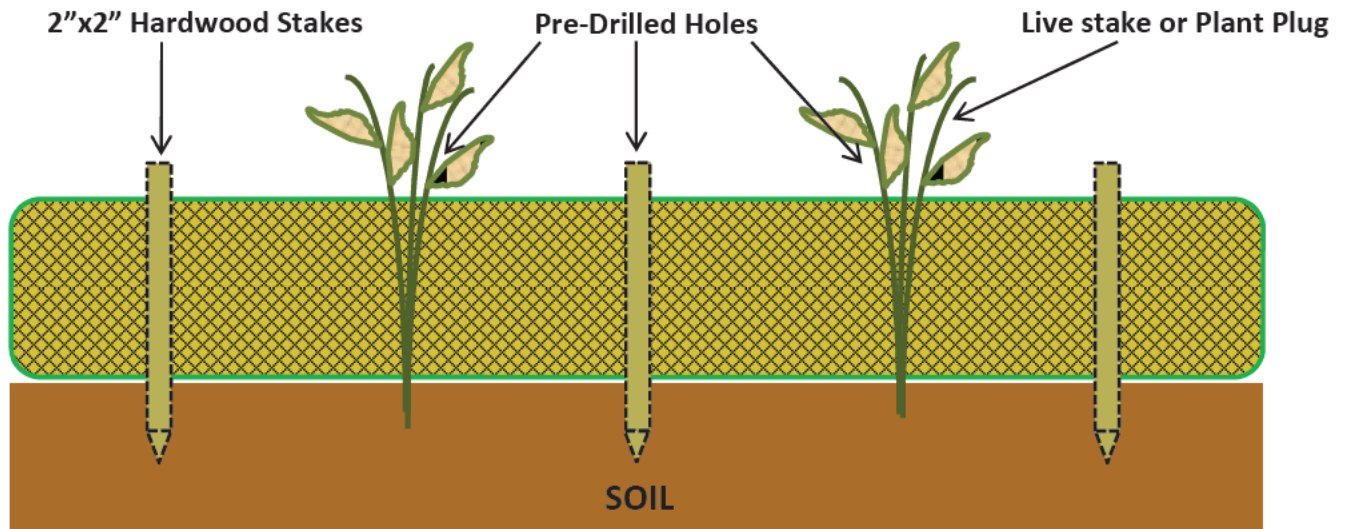

## Installation Instructions

1. Dig trench if needed and place EC-Log in desired location according to standard coir log installation specifications or plans.
2. Remove cardboard insert from the pre-drilled hole.
3. Install hardwood stake or plant material in the pre-drilled hole. Length of stake should be based on log diameter and soil type classification.
4. If installing multiple EC-Logs end to end, secure ends together with coir twine.

## Product Notes

1. EC-Logs are modified coir logs with pre-drilled slots for hardwood stakes or vegetation placement.
2. Pre-drilled slots are approximately 2' apart and are approximately 1.25" in diameter.
3. 2"x2" hardwood stakes are recommended for stabilization.
4. Live stakes or plant plugs can be used to promote ideal rooting through the EC-Log

**Available Diameters:** 12", 16" and 20"

**Available Lengths:** 10' and 20'

**Available Densities:** 7 and 9 lb. /linear foot



Another ECO-FRIENDLY  
Coir Product from  
FIBREDUST

Available From: FibreDust, LLC - 30 New Lane, Cromwell CT 06416

Phone: 302-858-2245–Email: [customer.support@fiberdust.com](mailto:customer.support@fiberdust.com) Web: <http://FibreDust.com>